

192-106 Polaris 850 Turbo Silicon Intake Kit
Installation Instructions

1. Remove stock factory charge tube, intake tube and plastic duct

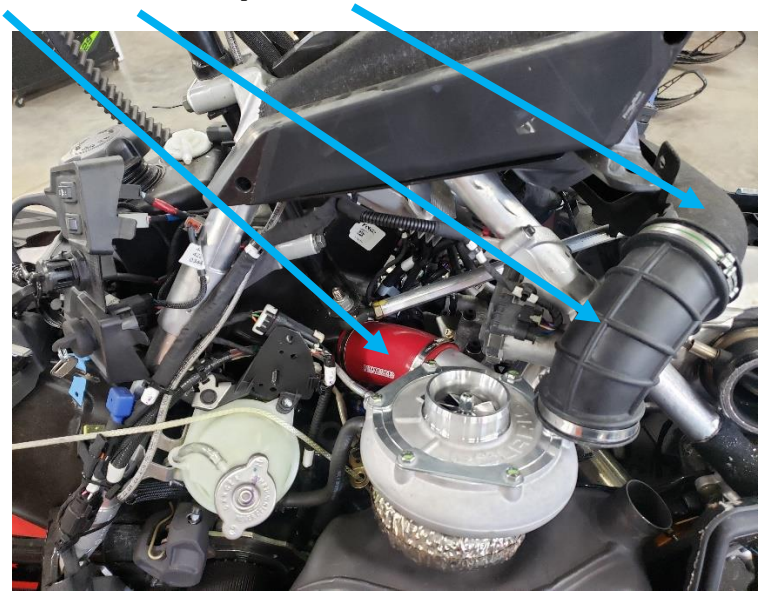



2. Save stock factory clamps, reuse on new silicone tubes at installation. Be sure plastic crush limiter sleeve stays in the factory inlet duct prior to installation of new charge tube.

3. Build sub assembly as shown below.

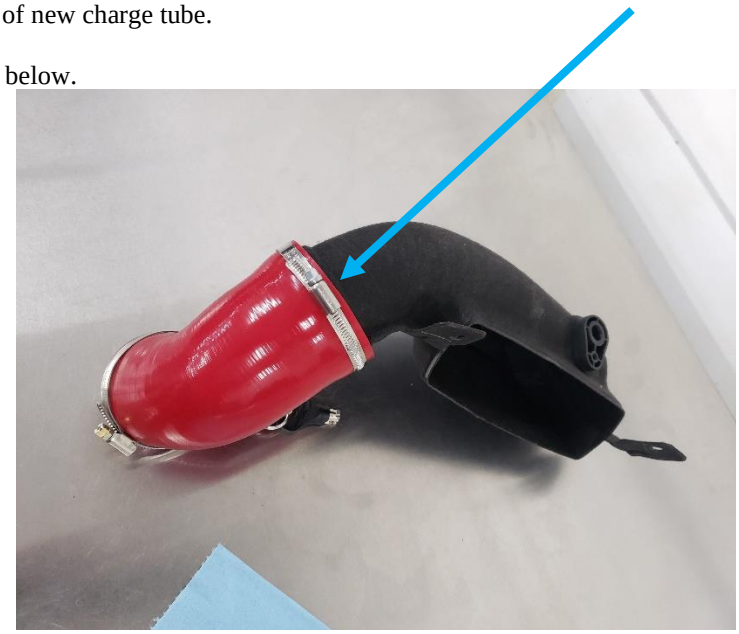

4. Install new charge tube and intake tube assembly as shown below.

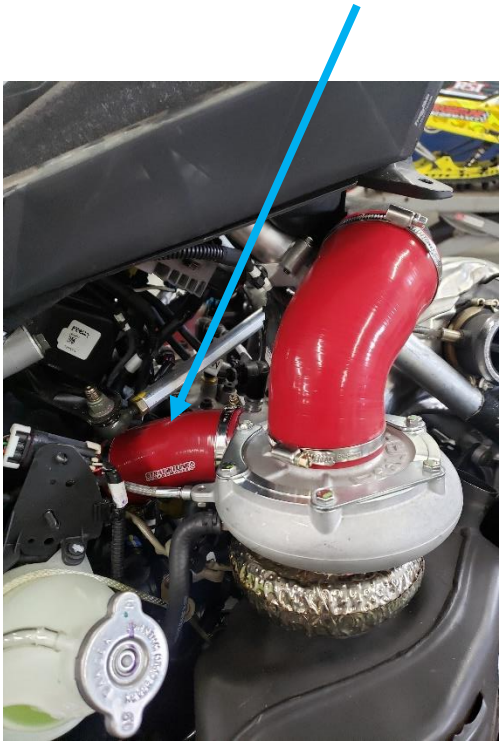

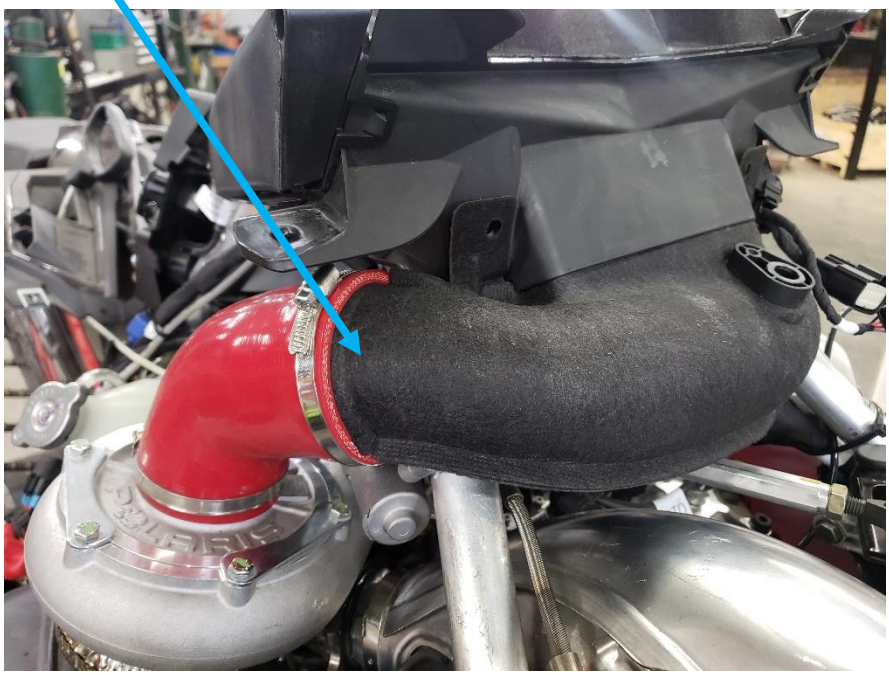

Technical questions please email tech@straightlineperformance.com

Facebook @ straightlineperformanceinc1
Youtube @ straightlineperfinc
Twitter @ straightlineperf

Straightline Performance 10317 Liberty Lane, Chisago City, MN 55013 651-466-0212 www.straightlineperformance.com